

## SPARE PART LIST FOR RN6028

1	Outer flange	25	608 deep groove ball bearing
2	Grinding wheel	26	608 bearing
3	Inner flange	27	windshield
4	Wheel cover	28	Screw ST4.2X65
5	Output shaft	29	Stator
6	Dust cover	30	Housing
7	Screw M4X14	31	Carbon brush holder
8	Front cover	32	Screw ST2.9X8-F
9	6201 bearing	33	Carbon brush
10	φ32 Spring ring	34	Coil spring
11	Big gear	35	Switch
12	HK0808needle baring	36	Speed controller
13	φ6.2 steel jump ring	37	Pressing plate
14	Screw ST4.2x22-F	38	Screw ST4.2X14
15	Self-locking spring	39	Pushing block
16	Self-locking pin	40	Pull rod
17	Machine head	41	Rear cover
18	M6 nut(12.9grade)	42	Screw ST4.2X12-F
19	small gear	43	Dustproof insert
20	629 deep groove ball bearing	44	Cord guard
21	629 bearing	45	Wiring cap
22	Screw M4X12	46	Power cprd 2x0.75mm
23	Armature	47	Wrench
24	608 Creepage stop ring		