

# RN0937 spare part list

NO.	Part name	NO.	Part name
1	Clamp spring	38	Gear
2	Spring performing	39	Axis lock
3	Steel ball frame	40	Bearing
4	Iron head spring	41	Gourd washer
5	Steel ball	42	Middle cover
6	Iron head	43	Grease baffle
7	Inner hexagon screw	44	Bearing
8	Spring washer	45	Retainer ring (big)
9	Iron head O-ring	46	Retainer ring(small)
10	Punch hammer	47	Rotor
11	Buffer block	48	Bearing
12	Cushion rubber pad	49	Windshield ring
13	Buffer plate	50	Self tapping screw
14	Cylinder O-ring	51	Stator
15	Front placket	52	Cabinet
16	Inner hexagon screw	53	Carbon brush holder
17	Spring washer	54	Carbon brush
18	Flat washer	55	Disc spring
19	Cylinder	56	Self tapping screw
20	Deputy hammer	57	Inner hexagon screw
21	Deputy hammer O-ring	58	Rear cover
22	Piston	59	Self tapping screw
23	Piston pin	60	Hexagon socket set screw
24	Connecting rod	61	Switch knob (left)
25	Needle bearing	62	Switch
26	Front placket O-ring	63	Switch knob(right)
27	Oil cap	64	Self tapping screw
28	Oil cap O-ring	65	Inner hexagon screw
29	Eccentric shaft	66	Locknut
30	Flat key	67	Tension disc
31	Clamp spring	68	Protecting bush
32	Bearing	69	Cable
33	Machine tapping screw	70	Hoop
34	Decorative cover	71	Rod nut
35	Handle cushion	72	Side handle substrate
36	Gear box	73	Side handle
37	Framework oil seal		