

# RN6332 PART LISTING

## DIAGRAM

## Explosion figure list

Nnnumber	Name & Description	Nnnumber	Name & Description	Nnnumber	Name & Description
1	Wire spring	41	Screw	81	Screw
2	Front cover	42	Samll skeleton oil seal	82	Bottom cover
3	Steel frame	43	Conical gear	83	Screw
4	Spring steel frame	44	Gasket	84	Anchor ear
5	Socket head cap screw	45	Bearing 6002RS	85	T nut M8
6	Front placket	46	Bearing gasket	86	Bracket
7	Steel ball	47	Stop gasket	87	Side handle
8	Four cover	48	Friction plate	88	Cushioning gasket
9	O-rings	49	Big gear	89	Screw
10	Impact hammer o-rings	50	Dish type gasket	90	Switch handle
11	Impact hammer	51	Nut M8	91	Switch
12	Big skeleton oil seal	52	Bearing 607RS	92	Switch handle
13	Steel washer	53	Eccentric shaft	93	Tension disc
14	Circlip	54	Flat key	94	Screw
15	Bearing 6907RS	55	Bearing 6003RS	95	Sheath
16	Steel ball	56	Bearing cap	96	Cable
17	cylinder	57	Socket head cap screw		
18	Four flat key	58	Circlip		
19	Cylinder spring washers	59	Thimble spring		
20	Cylinder spring	60	Thimble		
21	Front placket gear	61	Middle gear		
22	Wire spring	62	Steel bushing		
23	Cylinder rubber blanket	63	Needle roller bearing		
24	Straight cover	64	Screw		
25	Cylinder distance cover	65	Gland		
26	Deputy hammer	66	Middle cover		
27	Deputy hammer O-rings	67	Knob O-rings		
28	Piston O-rings	68	Under knob		
29	Piston	69	Bearing 6001RS		
30	Piston pin	70	Rotor		
31	Connecting rod	71	Stator screw		
32	Connecting rod needle	72	Stator		
33	Circlip	73	Button		
34	Nut	74	Bearing 608RS		
35	Oil gasket	75	Guide solar or lunar halo		
36	Straight cover O-rings	76	Houseing		
37	Oil cover	77	Socket head cap screw		
38	Oil seal cover o-rings	78	Brush holder		
39	Gear box	79	Brush		
40	KNOB ASS'Y	80	Coil spring		